

AIR FILTER MINDER® SERVICE INDICATOR



AUTOMOTIVE INSTALLATION INSTRUCTIONS

For use with fuel-injected gasoline or diesel engines.

1. The Filter Minder® Service Indicator should be installed on the air filter housing (clean air side). Select location for the gauge and check hood clearance. The Service Indicator may be mounted vertically or horizontally. (See Figure 1)
2. Open the air cleaner housing and drill a 11/16" hole. Be sure to collect shavings so that they do not fall into the air cleaner. A spade bit works well for plastic housings.
3. Close the air cleaner.
4. Push rubber grommet into the hole, then push the gauge into the rubber grommet until fully seated. (See Figure 2)

Parts check list

1. Filter Minder® gauge
2. Rubber grommet

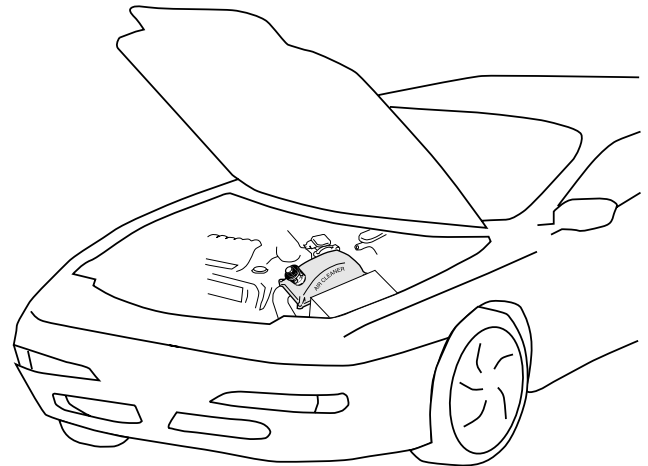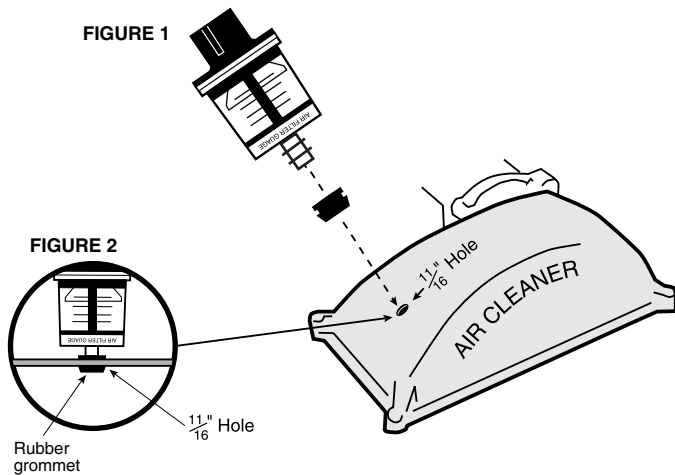

Air Filter Service Instructions:

Service air filter when yellow position indicator reaches the top of green or red line.


Do not use petroleum based products to clean the Filter Minder as it may attack the polycarbonate housing causing it to crack.

NOTE:

Depending upon driving conditions, an air filter may become plugged after a few miles, or may last over 100,000 miles. See page 2 for operating instructions.

Demonstration:

To demonstrate how the Air Filter Minder® Service Indicator works, unclamp the entrance to the air cleaner port and with the engine running, slowly close-off the opening. Watch the Filter Minder® gauge ratchet up to indicate restriction.

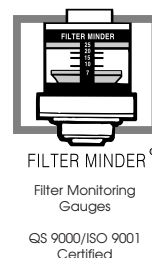

Engineered Products Company

2940 Airport Blvd.
Waterloo, IA 50703
Phone: 319-234-0231
800-689-7803
Fax: 319-234-8922