

Filter Minder® air cleaner indicator kit with straight thread o-ring.



Caution: New straight thread o-ring design. Please read installation instructions before installing the gauge.

Installation Instructions:

1. Remove the existing air cleaner indicator from the air cleaner tap.

2. Remove the old safety filter from the existing air cleaner tap. We recommend that it be completely removed by drilling through it. Be sure to collect the metal shavings to keep them from dropping into the air induction system. In some cases the old safety filter may be plugged or on the verge of plugging which would make the Filter Minder® inoperable. The enclosed adapter fitting has a corrosion resistant safety filter for long service life.


3. Install the enclosed adapter fitting to the air cleaner tap with the male straight thread o-ring facing out. **A pipe sealant should be used on the pipe threads to prevent leakage.** Tighten the fitting securely.

4. Install the Filter Minder® indicator to the adapter fitting making sure the supplied o-ring is in place. When the indicator

makes contact with the base of the fitting, turn another 1/4 turn. The Filter Minder® has locking tabs to prevent it from backing off. Do not over tighten or use the indicator as a driver to install the fitting. **Do not use pipe sealant on the straight thread o-ring fitting.**

The Filter Minder® is now ready to monitor the air cleaner system. The indicator gives a progressive indication of air filter plugging which allows the entire air filter capacity to be used. Many air cleaner systems will show very little restriction for 50,000 miles or more. Do not be alarmed! Many on-highway trucks get 200,000 to 300,000 miles air filter service life. Actual filter service life will depend on operating conditions.

W Kit Instructions

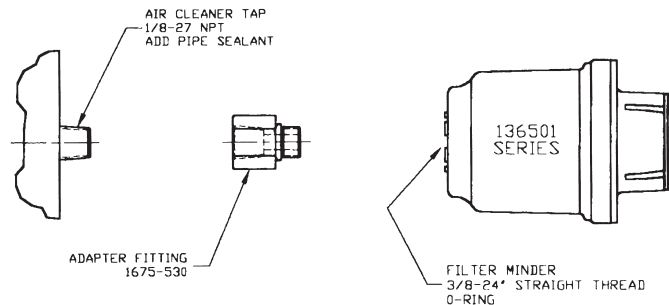

SCALE - HALF