

Filter Minder® air filter indicator kit with straight thread o-ring.



Caution: New straight thread o-ring design. Please read installation instructions before installing the gauge.

Installation Instructions:


1. Remove the existing indicator from the air cleaner.
2. Remove the air cleaner tap fitting.
3. Install the enclosed fitting to the air cleaner or induction piping with the male straight thread o-ring facing out. **A pipe sealant should be used on the pipe threads to prevent leakage.** Tighten the fitting securely.
4. Install the Filter Minder® indicator to the fitting making sure the supplied o-ring is in place. When the gauge makes contact with the base of the fitting, turn another 1/4 turn.

The Filter Minder® has locking tabs to prevent it from

backing off. Do not over tighten or use the indicator as a driver to install the fitting. **Do not use pipe sealant on the straight thread o-ring fitting.**

The Filter Minder® is now ready to monitor the air cleaner system. The indicator gives a progressive indication of air filter plugging which allows the entire air filter capacity to be used. Many air cleaner systems will show very little restriction for 50,000 miles or more. Do not be alarmed! Many on-highway trucks get 200,000 to 300,000 miles air filter service life. Actual filter service life will depend on operating conditions.

Y Kit Instructions

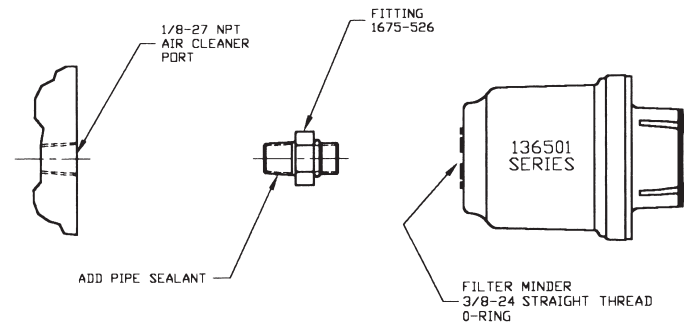

SCALE - HALF